




The IMPRESSA C5 Manual

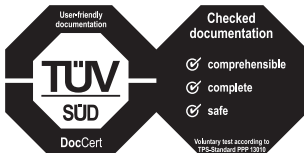

The 'IMPRESSA C5 Manual' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

Your IMPRESSA C5

| | |
|---|-----------|
| Control elements and accessories | 4 |
| Proper use | 6 |
| For your safety | 6 |
| The IMPRESSA C5 Manual | 8 |
| Symbol description..... | 8 |
| 1 IMPRESSA C5 – Click & Drink | 9 |
| Coffee that fulfils your wildest dreams | 9 |
| Click & Drink..... | 9 |
| JURA on the Internet..... | 10 |
| Knowledge Builder..... | 10 |
| 2 Preparing and using your IMPRESSA for the first time | 11 |
| Setting up..... | 11 |
| Filling the water tank..... | 11 |
| Filling the bean container..... | 11 |
| First-time use..... | 12 |
| Using and activating filter | 13 |
| Assessing and setting water hardness | 15 |
| Adjusting grinder | 16 |
| Switching on | 17 |
| Switching off | 17 |
| 3 Familiarising yourself with the control options | 18 |
| Preparing drinks at the touch of a button..... | 18 |
| One-off setting during drink preparation..... | 19 |
| Adjusting the permanent cup size settings..... | 20 |
| 4 Preparing drinks at the touch of a button | 21 |
| Espresso and coffee | 21 |
| Cappuccino..... | 21 |
| Pre-ground coffee | 22 |
| Milk foam..... | 24 |
| Hot water | 24 |
| 5 Adjusting the permanent settings in programming mode | 26 |
| Automatic switch-off | 26 |
| 6 Maintenance | 27 |
| Maintenance tips..... | 27 |
| Rinsing the machine..... | 27 |
| Changing the filter | 28 |

| | |
|--|----|
| Cleaning the machine | 29 |
| Descaling the machine | 31 |
| Rinsing the Easy Cappuccino Frother | 33 |
| Cleaning the Easy Cappuccino Frother | 34 |
| Descaling the water tank | 35 |
| <hr/> 7 Messages in the maintenance field and symbol display | 36 |
| <hr/> 8 Troubleshooting | 38 |
| <hr/> 9 Transport and environmentally neutral disposal | 39 |
| Empty system..... | 39 |
| Transport..... | 39 |
| Disposal..... | 39 |
| <hr/> 10 Technical data | 40 |
| <hr/> Index | 41 |
| <hr/> JURA contact details / Legal information | 44 |

Control elements and accessories


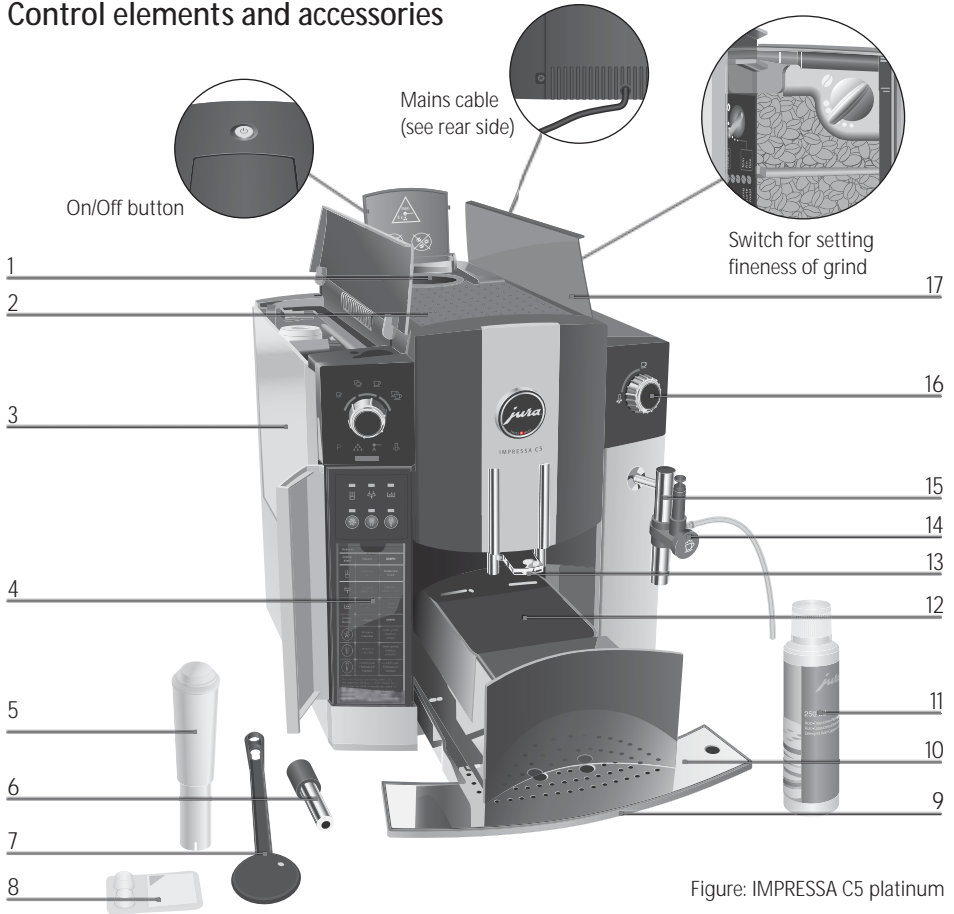


Figure: IMPRESSA C5 platinum

| | | | |
|---|---------------------------------------|----|---|
| 1 | Filler funnel for pre-ground coffee | 9 | Drip tray |
| 2 | Cup tray | 10 | Cup platform |
| 3 | Water tank with level indicator | 11 | JURA Cappuccino Cleaner |
| 4 | Overview of maintenance indicators | 12 | Drawer with coffee grounds container |
| 5 | CLARIS filter cartridge | 13 | Height-adjustable coffee spout |
| 6 | Hot water nozzle | 14 | Easy Cappuccino Frother with milk pipe |
| 7 | Measuring spoon for pre-ground coffee | 15 | Connector System® for removable nozzles |
| 8 | JURA cleaning tablets | 16 | Switch for hot water and milk preparation |
| | | 17 | Bean container, aroma preservation cover |

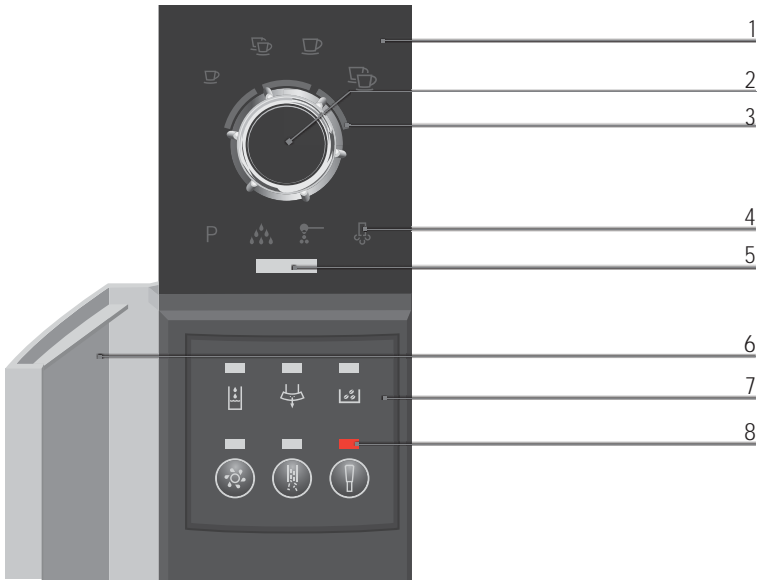

Symbol display

- | | |
|---|---------------------|
| 1 | Symbol display |
| 2 | Rotary Switch |
| 3 | Light segments |
| 4 | Symbols |
| | ☐ 1 Espresso |
| | ☐ 2 Espressos |
| | ☐ 1 coffee |
| | ☐ 2 coffees |
| | P (Programming) |
| | ☐ Maintenance |
| | ☐ Pre-ground coffee |
| | ☐ Steam |

Maintenance field

- | | |
|---|----------------------------|
| 5 | Maintenance indicator |
| 6 | Access door |
| 7 | Maintenance field |
| 8 | Indicators |
| | ☐ Water tank |
| | ☐ Coffee grounds container |
| | ☐ Bean container |
| | ⊗ Cleaning button |
| | ⊗ Descaling button |
| | ⊗ Filter button |

Proper use

The machine has been designed and built for domestic use. It should only be used to prepare coffee and to heat milk and water. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine always carefully read and comply with all these instructions. Keep this manual close to the IMPRESSA and, if appropriate, pass it on to the next user.

For your safety



Please read and note carefully the following important safety information.

By doing this, you can avoid the life-threatening danger of electric shock:

- Never use a machine which has been damaged or with a defective power cable.
- For information on what to do in case of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact the JURA service centre.
- If the power cable for this machine is damaged, it must be repaired either directly by JURA or by a JURA approved service centre.
- Make sure that the IMPRESSA and the power cable are not located close to hot surfaces.
- Be careful to ensure that the power cable does not get caught and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the IMPRESSA Manual. The machine contains live parts. If opened, there is a danger of serious injury. Repairs may only be carried out by JURA approved service centres, using original spare parts and accessories.

There is a risk of scalds or burns on the spouts or on the nozzle:

- Place the machine out of the reach of children.
- Do not touch any hot parts. Use the handles provided.
- Be careful to ensure that the appropriate nozzle is installed and clean. The nozzle or parts of the nozzle might come off if the parts are not assembled correctly or a blockage occurs.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the power cable to loosely hang down. The power cable can be tripped over or damaged.
- Protect your IMPRESSA from environmental influences such as rain, frost and direct sunlight.
- Do not put the IMPRESSA, cable or connections in water.
- Do not put the IMPRESSA or any individual parts in the dishwasher.
- Switch your IMPRESSA off before cleaning it. Always wipe your IMPRESSA with a damp cloth rather than a wet one, and protect it from prolonged water splash.
- Only connect the machine to a power supply in accordance with the information on the rating plate. The rating plate is located on the underside of your IMPRESSA. Further technical data is given in Chapter 10 'Technical Data'.
- Use only original JURA care products. Use of accessories that are not explicitly recommended by JURA could damage the IMPRESSA.
- Do not use any coffee beans treated with additives or caramelised coffee beans.
- Always fill the water tank with cold, fresh mains water.
- If you are absent for a prolonged period of time, turn the machine off.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge in how to use the machine safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Safe handling of the CLARIS filter cartridges:

- Filter cartridges should be kept out of the reach of children.
- Store them dry in the sealed package.
- Protect them from heat and direct sunlight.
- Do NOT use damaged filter cartridges.
- Do NOT open filter cartridges.

The IMPRESSA C5 Manual

You are holding the manual for your IMPRESSA C5 in your hand. The information contained in this manual will help you to familiarise yourself with your IMPRESSA safely and quickly and teach you the full range of facilities it offers.

Chapter 2, 'Preparing and using your IMPRESSA for the first time', explains step-by-step how to set up and prepare the IMPRESSA.

Chapter 3, 'Familiarising yourself with the control options' is important for you to read as you are familiarising yourself with your IMPRESSA. It invites you to actively explore all the different coffee experiences that it offers.

All the other chapters are intended to help you when you have a specific query.

If you use the IMPRESSA C5 Manual, you will become a past master at preparing exciting coffee specialities, you will be a Barista!

You can download the short operating instructions for your machine from the JURA website (www.jura.com).

Symbol description

Warnings



CAUTION

Always take note of any information marked with the CAUTION or WARNING symbol. The signal word **WARNING** points out potential risk of serious injury, and the signal word **CAUTION** potential risk of slight injury.

CAUTION

The **CAUTION** symbol is used to draw attention to circumstances which could cause the machine to become damaged.

Symbols used



Information and tips to ease things for you as you use your IMPRESSA.



References to the online JURA website, where you can find interesting further information: www.jura.com



Prompt to take action. This symbol means that you are being prompted to perform some action.


1 IMPRESSA C5 – Click & Drink

Coffee that fulfils your wildest dreams

JURA's avowed mission is to develop superior machines which get the best out of every blend and roast of coffee. This it delivers through a unique, intelligent pre-brew system combined with loving attention to detail.

Click & Drink

The IMPRESSA C5 demonstrates just how wonderful a perfect cup of coffee can taste and how easy it is to prepare one. Thus, the further development of the IMPRESSA compact series is setting new standards in coffee quality while at the same time maintaining a visually pleasing appearance from every angle. The smart control philosophy is especially to be admired. The various speciality coffees can be selected simply and intuitively using a single control element.

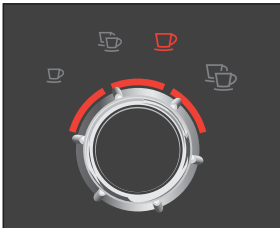

- Click & Drink

Thanks to the revolutionary one-switch operation philosophy with the smart Rotary Switch, you are only a single touch of a button away from enjoying a perfect cup of coffee. To make your choice, all you have to do is to rotate the switch between coffee and Espresso, one or two cups. Just click the control and seconds later you can be enjoying your drink.




- Indicators

The easy-to-understand indicators light up in a regal red, providing the information that you need. Just one click of the Rotary Switch away, unobtrusively concealed, are the maintenance buttons with associated indicators.

- Height-adjustable coffee spout

Whether you are after a small cup of Espresso or a large cup of breakfast coffee, the height-adjustable coffee spout, which can be raised and lowered between 65 and 111 mm, can be adjusted on a continuous scale to suit all sizes of cup. This prevents coffee splashing on the machine and is your guarantee of a rich, thick crema. The superior design and feel of the machine are also evident.

1 IMPRESSA C5 – Click & Drink

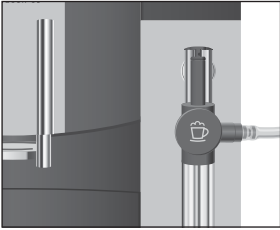

■ Connector System®

The Connector System® allows one to use the Easy Cappuccino Frother, which is fitted as standard, a hot water nozzle for an even jet of water and the optionally available 2-stage frothing nozzle or the Professional Cappuccino Frother for perfect milk foam or hot milk.

JURA on the Internet

Visit us on the Internet.

@ At www.jura.com you will find interesting and up-to-date information on your IMPRESSA and on every aspect of the subject of coffee.

Knowledge Builder

You can familiarise yourself with your IMPRESSA C5 in a fun way on the PC.

@ The Knowledge Builder awaits you at www.jura.com. The interactive assistant, LEO, will support you and explain the benefits of and how to use your IMPRESSA.

2 Preparing and using your IMPRESSA for the first time

This chapter provides you with the information you need to use your IMPRESSA without any problems. You will prepare your IMPRESSA step-by-step for your first coffee experience using it.

Setting up

When setting up your IMPRESSA, please note the following:

- Set the IMPRESSA down on a horizontal surface that is not sensitive to water.
- Choose a spot for your IMPRESSA which is protected against overheating. Ensure that the ventilation slots are not covered.

Filling the water tank

To enjoy perfect coffee, we recommend that you change the water every day.

CAUTION

Milk, mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.
-
- ▶ Open the cover of the water tank.
 - ▶ Remove the water tank and rinse it with cold water.
 - ▶ Fill the water tank with fresh, cold mains water and reinsert.
 - ▶ Close the cover of the water tank.

Filling the bean container

The bean container has an aroma preservation cover. This will ensure that your coffee beans retain their aroma for longer.

CAUTION

Coffee beans which have been treated with additives (e.g. sugar), either pre-ground or in the form of freeze-dried coffee, will damage the grinder.

- ▶ Only use untreated coffee beans to refill the bean container.
-
- ▶ Open the cover of the bean container and remove the aroma preservation cover.
 - ▶ Remove any dirt or foreign objects inside the bean container.
 - ▶ New machines contain an information sheet in the bean container. Remove this information sheet.

- ▶ Fill the bean container with coffee beans, then close the aroma preservation cover and the bean container cover.

First-time use




WARNING




If the machine is operated with a defective power cable, there is a danger of electric shock.


- ▶ Never use a machine which has a defective power cable.
-


Precondition: the water tank must be full.

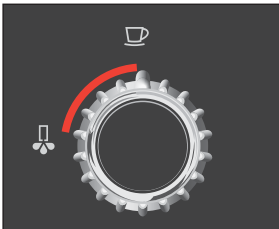- ▶ Remove the protective film from the symbol display.
- ▶ Insert the mains plug into a power socket.
- ⊖ ▶ Press the On/Off button to switch the IMPRESSA on.
The light segment by the switch will now flash.



- ▶ Place a receptacle under the Easy Cappuccino Frother.
- ⊖ ▶ Turn the switch in the anticlockwise direction.
The light segment by the switch will now light up. The system will now be filled with water. A small amount of water will flow out of the Easy Cappuccino Frother.
The operation stops automatically. The light segment by the switch will now flash.
- ⊕ ▶ Turn the switch in the clockwise direction.
As long as the machine is heating up, the Maintenance symbol  will flash. The Maintenance symbol  lights up.
- ▶ Place a receptacle under the coffee spout.
- ⊖ ▶ Press the Rotary Switch.
The machine will rinse itself, stopping automatically.
The 1 Espresso symbol  will light up indicating that your IMPRESSA is ready to use.

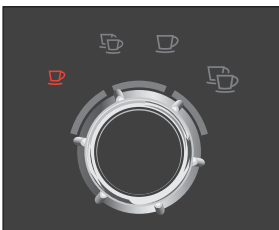

- i** After the first time that a coffee speciality has been prepared, you may find that the maintenance indicator and the bean container  display flash if the grinder has not yet been filled with coffee beans. In that case, prepare a different coffee speciality.







Using and activating filter


Your IMPRESSA no longer has to be descaled if you are using CLARIS filter cartridges.



- i** Perform the 'Using filter' operation without a break. This will ensure that your IMPRESSA always produces its best.
- @** You can also try out the 'Using filter' operation online. Visit the Knowledge Builder on www.jura.com.
 - ▶ Remove the packaging on the CLARIS filter cartridge.
 - ▶ Remove the water tank and empty it.
 - ▶ Lift the cartridge holder and insert the filter cartridge into the water tank, applying a light pressure.
 - ▶ Close the cartridge holder. It will lock into place audibly.
 - ▶ Fill the water tank with cold, fresh mains water and reinsert.
- i** After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.

Precondition: your IMPRESSA is ready for use.


- ▶ Open the access door.
-  ▶ Turn the Rotary Switch so that it points to the P symbol **P**.
-  ▶ Press the Rotary Switch.
 - The cleaning, descaling and filter indicators light up.
-  ▶ Hold down the Filter button **until** the Filter indicator  lights up.
-  ▶ Turn the Rotary Switch until the 3 light segments around the Rotary Switch light up.
- i** When the 3 light segments light up, the filter is activated. If none of the light segments light up, this means that the filter has not been activated.
-  ▶ Press the Rotary Switch to confirm the setting.
 - The light segment by the switch will now flash.

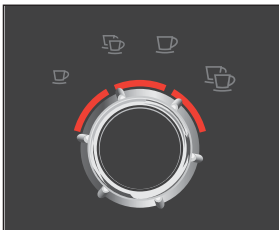

2 Preparing and using your IMPRESSA for the first time



- ▶ Place a receptacle (containing at least 500 ml) under the Easy Cappuccino Frother.
- ▶ If the milk pipe is connected, remove it.

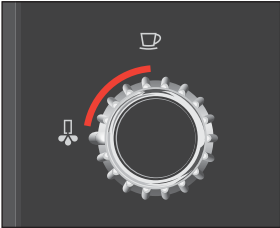


- ▶ Turn the switch in the anticlockwise direction.
Rinsing of the filter will now begin. The light segment by the switch will light up.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water could be slightly discoloured. This is not harmful to health, nor does it affect the taste.

Rinsing of the filter will automatically stop after approx. 500 ml, and the light segment by the switch will then flash.





- ▶ Turn the switch in the clockwise direction.
As long as the machine is heating up, the Maintenance symbol  will flash. The IMPRESSA is ready for use again. The filter is now activated.

Assessing and setting water hardness

The harder the water is, the more frequently the IMPRESSA needs to be descaled. It is therefore important to set the water hardness.

- i** However, if you are using the CLARIS filter cartridge and have activated the filter, you will not be able to adjust the water hardness.

The symbols in the symbol display show the configured degree of water hardness. The number of symbols corresponds to the relevant level.

| Level | Water hardness | Shown in display |
|-------|---|--|
| 0 | The water hardness is switched off, the automatic calcification indicator is switched off | No symbol is illuminated |
| 1 | German degree of water hardness 1 – 7° dH French degree of water hardness 1.79 – 12.53° f | 1 symbol is illuminated  |
| 2 | German degree of water hardness 8 – 15° dH French degree of water hardness 14.32 – 26.85° f | 2 symbols are illuminated  |
| 3 | German degree of water hardness 16 – 23° dH French degree of water hardness 28.64 – 41.14° f | 3 symbols are illuminated  |
| 4 | German degree of water hardness 24 – 30° dH French degree of water hardness 42.96 – 53.7° f | 4 symbols are illuminated  |

You can find out what the water hardness is, using the Aquadur® test strip enclosed in the Welcome Pack.

- ▶ Hold the test strip briefly (for one second) under flowing mains water. Shake off the water.
- ▶ Wait for about 1 minute.
- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

You can now configure the water hardness.

Example: to change the water hardness from level 3 to level 4, proceed as follows:

Precondition: your IMPRESSA is ready for use.

- ▶ Open the access door.

2 Preparing and using your IMPRESSA for the first time



- ▶ Hold down the Descaling button **until** the Descaling indicator lights up.
The Descaling indicator and the symbols will now light up.
- ▶ Turn the Rotary Switch until the four symbols light up.
- ▶ Press the Rotary Switch to confirm the level 4 setting.
The IMPRESSA is ready for use again. The water hardness is now set.

Adjusting grinder

You can adjust the grinder **continuously** to suit the roast of your coffee.

CAUTION

If you adjust the fineness of grind when the grinder is not operating, the grinding wheel could be damaged.

- ▶ Only adjust the fineness of grind when the grinder is running.

The consistency of grind setting is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.




Example: to change the fineness of grinding **during** preparation of a coffee, proceed as follows:

- ▶ Open the cover of the bean container and remove the aroma preservation cover.
- ▶ Place a cup under the coffee spout.
- ▶ Turn the Rotary Switch to the 1 coffee setting.
- ▶ Press the Rotary Switch to initiate preparation of the coffee.
The grinder will now start up, and the 1 coffee symbol flashes.
- ▶ Turn the fineness of grind switch to the desired position **while** the grinder is running.
The coffee will be prepared and the fineness of grind is set.




Switching on

When the IMPRESSA is switched on, a prompt to perform a rinse operation automatically appears.

- ☐ ▶ Press the On/Off button to switch the IMPRESSA on.
As long as the machine is heating up, the Maintenance symbol  will flash. The Maintenance symbol  lights up.
- ▶ Place a receptacle under the coffee spout.
-  ▶ Press the Rotary Switch to start the rinse operation.
The coffee spout will be rinsed. The operation stops automatically and your IMPRESSA is now ready for use.

Switching off

When you switch off your IMPRESSA, the system is automatically rinsed.

- ▶ Place a receptacle under the coffee spout.
- ☐ ▶ Press the On/Off button to switch the IMPRESSA off.
The system is rinsed and the Maintenance symbol  flashes. The operation stops automatically.
The IMPRESSA is switched off
- i** When the IMPRESSA is switched off with the On/Off button, the machine consumes less than 0.01 W of standby energy.

3 Familiarising yourself with the control options

With the IMPRESSA, you can prepare an excellent coffee speciality at the touch of a button. You also have the option of adjusting the coffee strength and amount of water to your personal taste while the coffee is brewing.

This chapter will show you how to operate the machine with the aid of examples. To familiarise yourself with your IMPRESSA, we recommend that you make a point of actively trying the facilities described in this chapter. You will find this is well worthwhile.

Learn how to perform the following:

- Preparing drinks at the touch of a button
- Adjusting the settings on a one-off basis **while** your drink is being prepared
- Adjusting the permanent cup size settings

i You can stop the machine at any time while a coffee speciality is being prepared. To do this press the Rotary Switch.

@ If you prefer to familiarise yourself with your IMPRESSA in a fun way on the PC, the interactive Knowledge Builder tutorial program can be found on the Internet at www.jura.com.



Preparing drinks at the touch of a button


Prepare your favourite coffee speciality at the touch of a button.

All coffee specialities are prepared following this model at the touch of a button.

i Unless you change the permanent settings, all coffee specialities prepared at the touch of a button will have a coffee strength of **mild**.

Example: this is how to prepare an Espresso.

- ▶ Place an Espresso cup under the coffee spout.
- ▶ Turn the Rotary Switch to the 1 Espresso setting .
- ▶ Press the Rotary Switch to initiate preparation of the Espresso.
The 1 Espresso symbol  will now flash, and the pre-set amount of water will flow into the cup.
Drink preparation stops automatically.

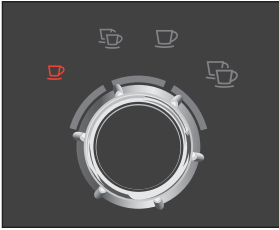

One-off setting during drink preparation

You can change both the coffee strength and the amount of water while your drink is being prepared. These settings are not saved.


One-off settings during coffee preparation always follow this model.

- i** During the grinding operation, the light segments above the Rotary Switch indicate the **coffee strength**. The coffee strength can be altered while 1 Espresso or 1 coffee is being prepared.



The coffee strength options available are as follows:

| Coffee strength | Shown in symbol display |
|-----------------|----------------------------------|
| Mild | 1 light segment is illuminated |
| Normal | 2 light segments are illuminated |
| Strong | 3 light segments are illuminated |

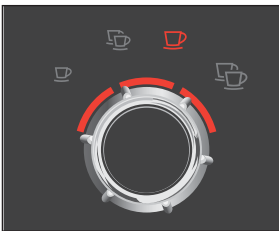- i** During the brew operation, the light segments indicate the **amount of water**. At this stage of the operation, you can change the amount of water by turning the Rotary Switch.



Example: this is how to prepare a **strong** coffee.

- ▶ Place a cup under the coffee spout.
- ▶ Turn the Rotary Switch to the 1 coffee setting .
- ▶ Press the Rotary Switch to initiate preparation of the coffee.
The grinder starts up, the 1 coffee symbol  flashes, and one light segment above the Rotary Switch is illuminated.

3 Familiarising yourself with the control options



Adjusting the permanent cup size settings


- ▶ **While** the grinder is running, turn the Rotary Switch in a clockwise direction until three light segments have lit up. The grinding operation stops, brewing begins and the pre-defined quantity of water flows into the cup. Drink preparation stops automatically.

It is easy to adjust the amount of water for all coffee specialities to the cup size for good. As in the following example, adjust the amount of water once. Every time you prepare a drink in the future, this amount of water will be dispensed.


Permanent adjustment of cup size works the same way for all coffee specialities.

Example: to **permanently** adjust the amount of water for an Espresso, you should proceed as follows:

- ▶ Place an Espresso cup under the coffee spout.

- ▶ Turn the Rotary Switch to the 1 Espresso setting .
- ▶ Keep the Rotary Switch pressed down **until** the light segment flashes above the Rotary Switch. Coffee preparation will start and the Espresso will flow into the cup.
- ▶ Press the Rotary Switch again when enough Espresso has flown into the cup. Espresso preparation will now stop. Your IMPRESSA will remember the amount of water you have specified for an Espresso **for good**.

- i** You can alter these settings at any time by repeating the above procedure.

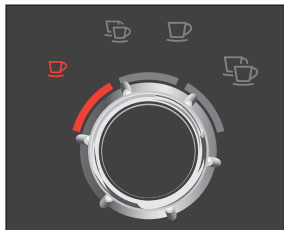

4 Preparing drinks at the touch of a button

This chapter will explain how to prepare coffee specialities, milk and hot water.

Chapter 3, 'Familiarising yourself with the control options', will teach you how to adjust the settings to your personal preferences.

i You can stop the machine at any time while a coffee speciality is being prepared. To do this press the Rotary Switch.

@ You can also try out the preparation of coffee specialities online. Visit the Knowledge Builder on www.jura.com.

Espresso and coffee

All speciality coffees (espresso ☞ and coffee ☞) are prepared following this model.

Example: this is how to prepare a coffee.


- ▶ Place a cup under the coffee spout.
- ☞ ▶ Turn the Rotary Switch to the 1 coffee setting ☞.
- ☞ ▶ Press the Rotary Switch to initiate preparation of the coffee. The 1 coffee symbol ☞ will now flash, and the pre-set amount of water will flow into the cup. Drink preparation stops automatically.

To prepare two cups of coffee, place two cups under the coffee spout and turn the Rotary Switch to the symbol for 2 coffees ☞, then press the switch to initiate coffee preparation.

Cappuccino

Precondition: your IMPRESSA is ready to use, the Easy Cappuccino Frother is mounted.


- ▶ Take the milk pipe out of the Welcome Pack.
- ▶ Take the protective cap off the Easy Cappuccino Frother.
- ▶ Attach the milk pipe to the frother.
- ▶ Insert the other end in a milk Tetrapack or connect it to a milk container.

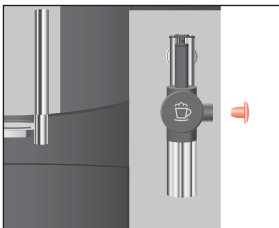

4 Preparing drinks at the touch of a button




- ▶ Place a cup under the Easy Cappuccino Frother.
- ☉ ▶ Turn the Rotary Switch so that it points to the Steam symbol ☉.
- ☉ ▶ Press the Rotary Switch to confirm your choice.
The Steam symbol ☉ will continue flashing until the IMPRESSA has warmed up. As soon as the required temperature has been reached, the light segment by the switch will flash.

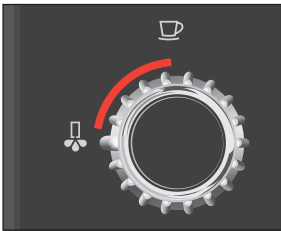

- ☉ ▶ Turn the switch in the anticlockwise direction.
The milk foam will be prepared.
- ☉ ▶ Turn the switch in the clockwise direction when there is sufficient milk foam in the cup.

i As long as the light segment continues to flash on the switch, you can continue preparing milk foam.

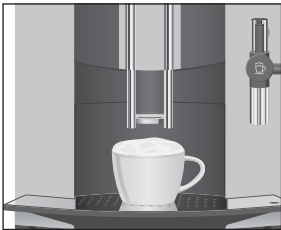

- ▶ Move the cup under the coffee spout.
- ☉ ▶ Turn the Rotary Switch to the 1 Espresso setting ☉.
- ☉ ▶ Press the Rotary Switch to initiate preparation of the Espresso.
The 1 Espresso symbol ☉ will now flash, and the pre-set amount of water will flow into the cup.
Drink preparation stops automatically.

To ensure that the Easy Cappuccino Frother works perfectly, you should clean it **regularly**. For further information on cleaning, see Chapter 6, 'Maintenance – cleaning the Easy Cappuccino Frother'.

Pre-ground coffee

You can choose a second variety of coffee with the filler funnel for pre-ground coffee.


All coffee specialities using pre-ground coffee are prepared in the same way.

- i** Never add more than two level measuring spoons of pre-ground coffee.
- i** Use pre-ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.

- i** If you have added too little pre-ground coffee, the IMPRESSA will come to a halt ready for further use.

Example: proceed as follows to prepare a cup of coffee using pre-ground coffee.



- ▶ Take the measuring spoon for pre-ground coffee out of the Welcome Pack.
- ☉ ▶ Turn the Rotary Switch so that it points to the pre-ground coffee symbol ☉.
- ⏻ ▶ Press the Rotary Switch to confirm your choice. The pre-ground coffee symbol ☉ will flash.
- ▶ Place a cup under the coffee spout.

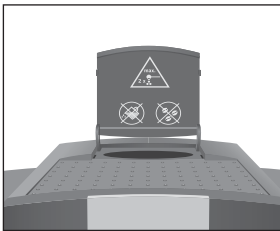

- ▶ Open the filler funnel for pre-ground coffee.
- ▶ Place one level measuring spoon of pre-ground coffee in the filler funnel.
- ☉ ▶ Turn the Rotary Switch to the 1 coffee setting ☐.
- ⏻ ▶ Press the Rotary Switch to initiate preparation of the coffee. The symbols for pre-ground coffee ☉ and 1 coffee ☐ will flash, and the pre-configured amount of water will flow into the cup. Drink preparation stops automatically.



To prepare two cups of pre-ground coffee, place two cups under the coffee spout, add two level measuring spoons of pre-ground coffee to the filler funnel, turn the Rotary Switch to the symbol for 2 coffees ☐ and then press to initiate preparation of the coffee.

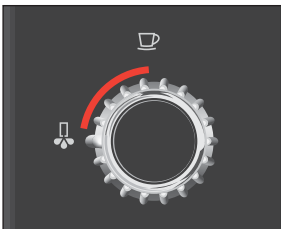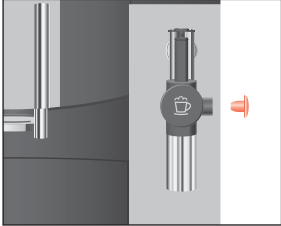Milk foam



Precondition: your IMPRESSA is ready to use, the Easy Cappuccino Frother is mounted.

- ▶ Take the milk pipe out of the Welcome Pack.
- ▶ Take the protective cap off the Easy Cappuccino Frother.
- ▶ Attach the milk pipe to the frother.
- ▶ Insert the other end in a milk Tetrapack or connect it to a milk container.

- ▶ Place a cup under the Easy Cappuccino Frother.
- ▶ Turn the Rotary Switch so that it points to the Steam symbol .
- ▶ Press the Rotary Switch to confirm your choice. The Steam symbol  will continue flashing until the IMPRESSA has warmed up. As soon as the required temperature has been reached, the light segment by the switch will flash.
- ▶ Turn the switch in the anticlockwise direction. The milk foam will be prepared.
- ▶ Turn the switch in the clockwise direction when there is sufficient milk foam in the cup.

i As long as the light segment continues to flash by the switch, you can continue preparing milk foam.

To ensure that the Easy Cappuccino Frother works perfectly, you should clean it **daily**. Further information can be found in Chapter 6, 'Maintenance – cleaning the Easy Cappuccino Frother'.

Hot water



To obtain a perfect water flow, attach the removable hot water nozzle.

There is a danger of scalding from hot water splashes.


- ▶ Avoid direct contact with the skin.
-

Start by replacing the nozzle:

- ▶ Carefully remove the Easy Cappuccino Frother from the Connector System®.


4 Preparing drinks at the touch of a button

- ▶ Take the hot water nozzle out of the Welcome Pack.
- ▶ Insert this into the Connector System® with a light turning motion.
- ▶ Place a cup under the hot water nozzle.

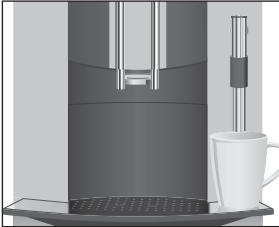

Precondition: your IMPRESSA is ready for use.

- ▶ Turn the switch in the anticlockwise direction.
The light segment on the switch will light up and hot water will flow into the cup.
- ▶ Turn the switch in the clockwise direction when there is sufficient water in the cup.

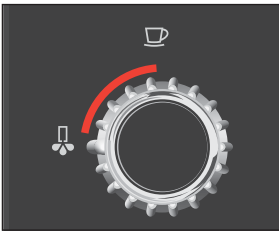





5 Adjusting the permanent settings in programming mode

Automatic switch-off

By instructing your IMPRESSA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your IMPRESSA switches off automatically after the preset time following the last action on the machine.


The number of symbols illuminated indicates the programmable switch-off time that has been activated in hours:

| Switch-off time | Shown in symbol display | Meaning |
|-----------------|---|--------------------------|
| 1 hour | 1 symbol is illuminated  | Switch-off after 1 hour |
| 2 hours | 2 symbols are illuminated  | Switch-off after 2 hours |
| 4 hours | 3 symbols are illuminated  | Switch-off after 4 hours |
| 8 hours | 4 symbols are illuminated  | Switch-off after 8 hours |

Example: to amend the programmable switch-off time from 2 hours to 4, you should proceed as follows:



Precondition: your IMPRESSA is ready for use.



▶ Open the access door.


 ▶ Turn the Rotary Switch so that it points to the P symbol **P**.

 ▶ Press the Rotary Switch.

The cleaning, descaling and filter indicators light up.

 ▶ Hold down the Cleaning button **until** the Cleaning indicator  lights up.

The IMPRESSA is in programming mode, the Cleaning indicator  and the symbols  are illuminated.

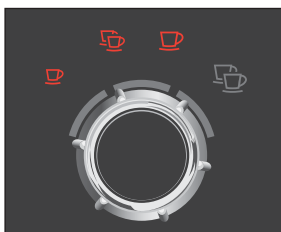

 ▶ Turn the Rotary Switch until the 3 symbols  light up.


 ▶ Press the Rotary Switch to confirm the setting.

The IMPRESSA is ready for use again. The programmable switch-off time is now configured at 4 hours.

6 Maintenance

Your IMPRESSA has the following integrated maintenance programs:

- Rinse the machine
- Change the filter
- Clean the machine
- Descale the machine

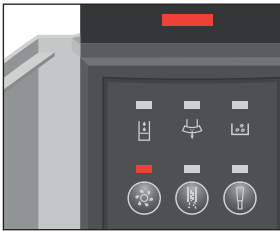

The illuminated maintenance indicator draws your attention to the maintenance actions that are necessary. Open the access door and note the further indicators in the maintenance field. In the example shown on the left, your IMPRESSA is prompting you to clean it.

- i** Clean or descale the machine or change the filter whenever the appropriate indicator is lit up.


Maintenance tips

To ensure that you get many years' reliable service out of your IMPRESSA and to guarantee the optimum coffee quality, the machine requires **daily** maintenance.

You should proceed as follows:



- Empty the coffee grounds container and the drip tray. Rinse them with warm water.
- Rinse the water tank with clean water.
- Dismantle and rinse the Cappuccino Frother (see Chapter 6, 'Maintenance – rinsing the Easy Cappuccino Frother').
- Wipe the surface of the machine with a damp cloth.

Rinsing the machine

- i** Once the IMPRESSA has heated up following switch-on, the Maintenance symbol  will light up, prompting you to perform a rinse operation. To initiate the rinse operation, press the Rotary Switch.
- i** When the IMPRESSA is switched off, a rinse operation is automatically performed.



Precondition: the IMPRESSA is ready for use.


- ▶ Place a receptacle under the coffee spout.
- 🌀 ▶ Turn the Rotary Switch so that it points to the Maintenance symbol .
- 🕒 ▶ Press the Rotary Switch to start the rinse operation. The rinse operation now starts and the Maintenance symbol  flashes. Rinsing stops automatically. Your IMPRESSA is ready for use.


Changing the filter

- i** After 50 litres of water have been dispensed, the filter will cease to work. Your IMPRESSA will automatically prompt you to replace the filter.
- i** After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.
- i** If the CLARIS filter cartridge is not activated, you will not be prompted to change the filter.

Replacement following a prompt

To change the CLARIS filter cartridge when prompted to do so by your IMPRESSA, you should proceed as follows:

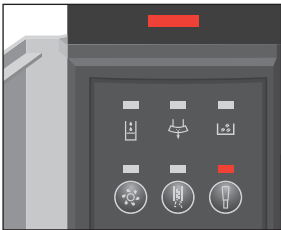



Precondition: the Maintenance indicator and the Filter indicator  are illuminated.

- ▶ Remove the water tank and empty it.



- ▶ Lift the cartridge holder.
- ▶ Take out the old CLARIS filter cartridge.
- ▶ Insert the new CLARIS filter cartridge into the water tank, pressing it lightly.
- ▶ Close the cartridge holder. It will lock into place audibly.
- ▶ Fill the water tank with cold, fresh mains water and reinsert.

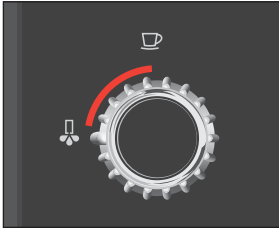


- ▶ Place a receptacle (containing at least 500 ml) under the Easy Cappuccino Frother.
- ▶ If the milk pipe is connected, remove it.
- ▶ Hold down the Filter button **until** the Filter indicator  flashes.
The light segment by the switch will now flash.

- ▶ Turn the switch in the anticlockwise direction.
Rinsing of the filter will now begin. The light segment by the switch will now light up.

i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

i The water could be slightly discoloured. This is not harmful to health, nor does it affect the taste.

Rinsing of the filter will automatically stop after approx. 500 ml, and the light segment by the switch will then flash.

- ▶ Turn the switch in the clockwise direction.
The Maintenance symbol  flashes, the IMPRESSA heats up and is once again ready for use.

Manual filter change

You can initiate the 'Changing the filter' operation manually. Start when the first prompt appears ▶, as described under 'Replacement following a prompt'.

Cleaning the machine

After dispensing 200 cups of coffee or performing 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.

i The cleaning program only lasts about 15 minutes.


i Do not interrupt the cleaning program, as this will impair the quality of cleaning.

i Your dealer will stock JURA cleaning tablets.

@ Try out the 'Cleaning the machine' operation online. Visit the Knowledge Builder on www.jura.com.

Cleaning following a prompt

To clean your IMPRESSA when prompted to do so, you should proceed as follows:

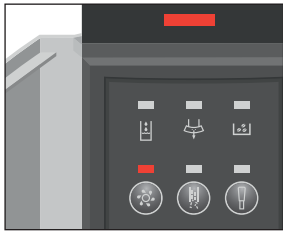

Precondition: the Maintenance indicator and the Cleaning indicator (☼) are illuminated.

- ☼ ▶ Hold down the Cleaning button **until** the Cleaning indicator (☼) flashes.
- The coffee grounds container indicator ☼ now flashes.
- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.

The Cleaning indicator (☼) will now light up.

- ▶ Place a receptacle under the coffee spout.

- ☼ ▶ Press the Cleaning button.

The Cleaning indicator (☼) now flashes. Water flows out of the coffee spout.

The process is interrupted. The pre-ground coffee symbol ☼ flashes and the Cleaning indicator (☼) lights up.

- ▶ Open the cover of the filler funnel for pre-ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.


- ☼ ▶ Press the Cleaning button.

The Cleaning indicator (☼) now flashes. Water flows out of the coffee spout once again.

The operation stops, the coffee grounds container indicator ☼ flashes.

- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.

The cleaning operation is now complete. The IMPRESSA heats up and is once again ready for use.

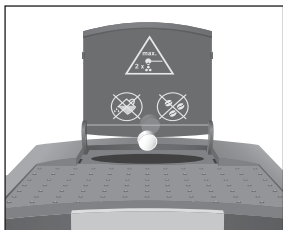

Manual cleaning

You can initiate the 'Cleaning the machine' operation manually. Start when the first prompt appears ▶, as described under 'Cleaning following a prompt'.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the degree of hardness of your water.



CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse the descaling agent off with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.

CAUTION

If the descaling operation is interrupted, it is possible that the machine could be damaged.

- ▶ Allow the descaling program to run to the end.

CAUTION

If the descaling agent comes into contact with sensitive surfaces, the possibility of damage cannot be excluded.

- ▶ Clean up any splashes immediately.


i The descaling program lasts approx. 40 minutes.


i Your dealer will stock JURA descaling tablets.

@ Try out the 'Descaling the machine' operation online. Visit the Knowledge Builder on www.jura.com.

Descaling following a prompt

To descale your IMPRESSA when prompted to do so, you should proceed as follows:


Precondition: the maintenance indicator and the Descaling indicator  are lit up.

- ▶ Hold down the Descaling button **until** the Descaling indicator  flashes.

The coffee grounds container indicator  now flashes.

- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.



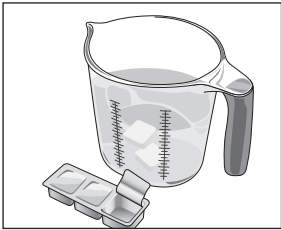



The Water Tank indicator  now flashes.

- ▶ Remove the water tank and empty it.
 - ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a container that holds 500 ml of water. This can take a few minutes.
 - ▶ Pour the solution into the empty water tank.
 - ▶ Insert the water tank.
 - ▶ Remove the frother.
- ▶ Place a container under the Connector System[®].



- ▶ Turn the switch in the anticlockwise direction. This causes water to flow out of the Connector System[®]. The light segment by the switch lights up during the descaling operation. The operation stops automatically, and the light segment by the switch flashes.



- ▶ Turn the switch in the clockwise direction. The descaling operation will resume. After a few minutes, the coffee grounds container indicator  flashes.
- ▶ Empty the container under the Connector System[®].
- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine. The Water Tank indicator  now flashes.
- ▶ Rinse the water tank thoroughly and fill it with cold, fresh mains water.
- ▶ Put the water tank back in. The light segment by the switch will now flash.
- ▶ Place a container under the Connector System[®].



- ▶ Turn the switch in the anticlockwise direction.
 This causes water to flow out of the Connector System®.
 The operation stops automatically, and the light segment by the switch flashes.
- ▶ Turn the switch in the clockwise direction.
 The descaling operation will resume. After a few minutes, the coffee grounds container indicator ☞ flashes.
 - ▶ Empty the drip tray and the coffee grounds container.
 - ▶ Insert the empty drip tray and coffee grounds container back in the machine.
 - ▶ Put back the frother.
 The descaling operation is now complete. The Maintenance symbol 🔥 flashes, the IMPRESSA heats up and is once again ready for use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.


Manual descaling

You can initiate the operation 'Descaling the machine' manually. Start when the first prompt appears ▶, as described under 'Descaling following a prompt'.

Rinsing the Easy Cappuccino Frother

To ensure that the Easy Cappuccino Frother works perfectly, you should rinse it with water **whenever** you have prepared some milk.

- i** The IMPRESSA will not prompt you to rinse the Easy Cappuccino Frother.
 - ▶ Carefully remove the Easy Cappuccino Frother from the Connector System®.
 - ▶ Take the Easy Cappuccino Frother apart.
 - ▶ Rinse all the frother parts thoroughly under running water.
 - ▶ Reassemble the Easy Cappuccino Frother and attach it to the Connector System®.

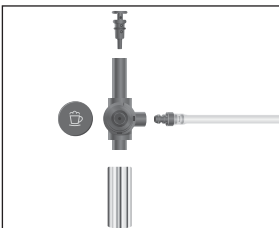

Cleaning the Easy Cappuccino Frother

To ensure that the Easy Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

- i** The IMPRESSA will not prompt you to clean the Easy Cappuccino Frother.
- i** Your dealer will stock the JURA Cappuccino Cleaner.

CAUTION



If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.


@ Try this operation out on the Internet. Visit the Knowledge Builder on www.jura.com.

Precondition: your IMPRESSA is ready for use.


- ▶ Place a receptacle under the Easy Cappuccino Frother.
- ▶ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.


 ▶ Turn the Rotary Switch so that it points to the Steam symbol .

 ▶ Press the Rotary Switch to confirm the action.


The Steam symbol  will continue flashing until the IMPRESSA has warmed up.

As soon as the required temperature has been reached, the light segment by the switch will flash.

 ▶ Turn the switch in the anticlockwise direction.
The frother and pipe will be cleaned.

 ▶ Turn the switch in the clockwise direction as soon as the container holding the Cappuccino Cleaner is empty.
The light segment by the switch will now flash.

- ▶ Fill the receptacle with 250 ml of fresh water and immerse the milk pipe in it.

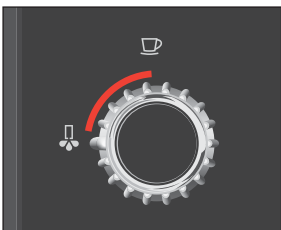

- i** Perform the next step as soon as the light segment by the switch is flashing. This means that the IMPRESSA has reached the temperature necessary for steam. If the light segment is no longer flashing, turn the Rotary Switch once again to the Steam symbol ☕ and press the Rotary Switch. As soon as the required temperature has been reached, the light segment by the switch will flash again.










- ▶ Turn the switch in the anticlockwise direction.
The frother and pipe are rinsed with fresh water.
- ▶ Turn the switch in the clockwise direction as soon as the container holding the water is empty.
Cleaning of the Easy Cappuccino Frother is now complete and your IMPRESSA is ready to use again.









Descaling the water tank

The water tank may build up deposits of limescale. In order to ensure perfect working order, descale the water tank from time to time.



- ▶ Remove the water tank.
- ▶ If you use a CLARIS filter cartridge, remove this.
- ▶ Descale the tank with a mild, commercially available descaling agent in accordance with the instructions of the manufacturer.
- ▶ Rinse the water tank with clean water afterwards.
- ▶ If you use a CLARIS filter cartridge, insert this again.
- ▶ Fill the water tank with fresh water and insert it again.

7 Messages in the maintenance field and symbol display

| Message | Cause/Result | Action |
|--|--|---|
| Maintenance indicator is illuminated or is flashing. | The IMPRESSA wants to tell you something. | ► Open the access door and note the other indicators. |
| Maintenance indicator and Water Tank indicator  are flashing. | Water tank is empty. You cannot prepare any coffee or hot water. | ► Fill the water tank (see Chapter 2, 'Preparing and using your IMPRESSA for the first time – Filling the water tank'). |
| Maintenance indicator and coffee grounds container indicator  are flashing. | Coffee grounds container is full. You cannot prepare any coffee but you can obtain hot water. | ► Empty the coffee grounds container and the drip tray. |
| Maintenance indicator and bean container indicator  are flashing. | Bean container is empty. You cannot prepare any coffee but you can obtain hot water. | ► Fill the bean container. The indicator will go out after you have prepared one coffee speciality (see Chapter 2, 'Preparing and using your IMPRESSA for the first time – Filling the bean container'). |
| Maintenance indicator and Cleaning indicator  light up. | The IMPRESSA will prompt you to clean it after 200 cups of coffee or 80 switch-on rinses. | ► Perform cleaning operation (see Chapter 6, 'Maintenance – Cleaning the machine'). |
| Maintenance indicator and Descaling indicator  light up. | The IMPRESSA is prompting you to descale it. | ► Perform descaling operation (see Chapter 6, 'Maintenance – Descaling the machine'). |
| Maintenance indicator and Filter indicator  light up. | The CLARIS filter cartridge is exhausted. | ► Change the CLARIS filter cartridge (see Chapter 6, 'Maintenance – Changing the filter'). |
| Maintenance indicator and Cleaning indicator  flash twice. | System is too hot to clean. | ► Wait a few minutes. |

| Message | Cause/Result | Action |
|---|--|---|
| Maintenance indicator and Descaling indicator  flash twice. | System is too hot to descale. | ► Wait a few minutes. |
| Maintenance symbol  flashes twice. | System is too hot for maintenance and switch-off rinses. | ► Wait a few minutes. |
| Maintenance indicator and all the indicators      behind the access door are flashing synchronously. | There is a general fault. | ► Switch the IMPRESSA off with the On/Off button  . If the problem persists when you turn the machine back on again, contact Customer Support in your country (see 'JURA contact details / Legal information'). |

8 Troubleshooting


| Problem | Cause/Result | Action |
|--|---|--|
| Grinder is making a very loud noise. | There are some foreign bodies in the grinder. | ► Contact Customer Support in your country (see 'JURA contact details / Legal information'). |
| The coffee grounds container indicator  is flashing continuously. | Drawer with coffee grounds container has not been correctly inserted. | ► Insert the drawer correctly. |
| The frother does not produce enough milk foam. | Easy Cappuccino Frother is dirty. | ► Clean the Easy Cappuccino Frother (see Chapter 6, 'Maintenance – Cleaning the Easy Cappuccino Frother'). |
| Coffee only comes out in drips. | Coffee or pre-ground coffee has been ground too fine and is blocking the sieve. | ► Put the grinder on a coarser setting or use coarser pre-ground coffee (see Chapter 2, 'Preparing and using your IMPRESSA for the first time – Adjusting grinder'). |
| Water hardness cannot be adjusted. | CLARIS filter cartridge is activated. | ► Deactivate the CLARIS filter cartridge (see Chapter 2, 'Preparing and using your IMPRESSA for the first time – Using and activating filter'). |
| The maintenance indicator lights up and the bean container indicator  continues to flash although it has been filled. | The machine will not be able to tell that the bean container has been filled until the next time you make a coffee. | ► Prepare a coffee speciality. |

i If you have not been able to solve the problem, contact Customer Support in your country (see 'JURA contact details / Legal information').







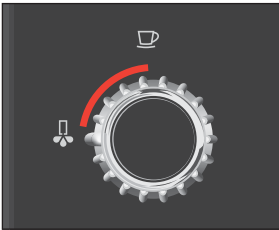


9 Transport and environmentally neutral disposal

Empty system

To protect the IMPRESSA from damage caused by frost during transportation, the system needs to be emptied.



Precondition: the IMPRESSA is ready for use.

- ▶ Place a receptacle under the frother.
-  ▶ Turn the Rotary Switch so that it points to the Steam symbol .
-  ▶ Press the  Rotary Switch to confirm your choice. The Steam symbol  will continue flashing until the machine has warmed up. As soon as the required temperature has been reached, the light segment by the switch will flash.
-  ▶ Turn the switch in the anticlockwise direction. Steam will now come out of the frother.
- ▶ Remove the water tank and empty it. Steam will continue to flow out of the frother **until** the system is empty. The light segment by the switch will now flash.
-  ▶ Turn the switch in the clockwise direction.
- i** The Maintenance indicator and the Water Tank indicator  both flash. Please ignore these indicators.
-  ▶ Press the On/Off button to switch the IMPRESSA off.
- i** The next time you use the machine, you will need to refill the system (see Chapter 2, 'Preparing and using your IMPRESSA for the first time – First-time use').

Transport

Keep the packaging for your IMPRESSA. It is used to protect the machine during transportation.


Disposal



Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials capable of being recycled which should be salvaged for recycling. Please therefore dispose of old machines via suitable collection systems.

10 Technical data

| | |
|--|---|
| Voltage | 220–240 V ~, 50 Hz |
| Power output | 1450 W |
| Marks of conformity | CE  |
| Pump pressure | Static max. 15 bar |
| Holding capacity of water tank | 1.9 litres |
| Holding capacity of bean container | 200 g |
| Holding capacity of coffee grounds container | Approx. 16 portions |
| Cable length | Approx. 1.1 m |
| Weight | 9 kg |
| Dimensions (W x H x D) | 28 x 34.5 x 41 cm |

Index

A

- Activate filter 13
- Addresses 44
- Adjusting
 - Grinder 16
- Adjusting the amount of water
 - One-off setting during drink preparation 19
 - Permanent adjusting the permanent cup size settings 20
- Altering coffee strength
 - One-off setting during drink preparation 19
- Automatic switch-off 26

B

- Bean container 4
 - Filling 11

C

- Cappuccino preparation 21
- Changing
 - Filter 28
- CLARIS filter cartridge
 - Activating 13
 - Changing 28
 - Using 13
- Cleaning
 - Easy Cappuccino Frother 34
 - Machine 29
- Coffee powder
 - Pre-ground coffee preparation 22
- Coffee preparation 21
- Coffee speciality 21
- Coffee strength
 - One-off setting during drink preparation 19
- Contact details 44
- Customer support 44

D

- Descale
 - Water tank 35
- Descaling 31

E

- Easy Cappuccino Frother 4
 - Cleaning 34
 - Rinsing 33
- Espresso preparation 21

F

- Filling
 - Bean container 11
 - Water tank 11
- Filter
 - Activating 13
 - Changing 28
 - Using 13
- First-time use 12

G

- Grinder
 - Adjust 16
- Ground coffee
 - Pre-ground coffee preparation 22

H

- Hotline 44
- Hot water preparation 24

J

- JURA contact details 44

L

- Legal information 44

M

- Machine
 - Cleaning 29
 - Descaling 31
 - Rinsing 27

- Setting up 11
- Switching off 17
- Switching on 17
- Milk foam preparation 24

O

- One-off setting during drink preparation 19

P

- Pre-ground coffee preparation 22
- Preparation
 - Cappuccino 21
 - Coffee 21
 - Espresso 21
 - Hot water 24
 - Milk foam 24
 - Pre-ground coffee 22
- Programming mode
 - Automatic switch-off 26
- Proper use 6
- Putting into service
 - First-time use 12

R

- Rinsing
 - Easy Cappuccino Frother 33
 - Machine 27
- Rotary switch 9

S

- Safety information 6
- Setting
 - Water hardness 15
- Setting up 11
- Switching off 17
- Switching on 17

U

- Use, Proper 6
- Using filter 13

W

- Water hardness 15
 - Assessing 15
 - Setting 15
- Water tank 4
 - Descaling 35
 - Filling 11

JURA contact details / Legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Phone: +41 62 38 98 233

@ Contact information is available on the company website at www.jura.com.

Directives

The machine complies with the following EU directives:

- 2006/95/EC – Low Voltage Directive
- 2004/108/EC – Electromagnetic Compatibility
- 2009/125/EC – Ecodesign

Technical changes

We reserve the right to make technical changes.

The illustrations used in the IMPRESSA C5 Manual show the IMPRESSA C5 platinum model. Your IMPRESSA could incorporate minor changes.

Feedback

Your opinion is important to us!

Use the contact link at www.jura.com.

Copyright

The Instructions for Use contain information which is protected by copyright. It is not permitted to photocopy or translate these Instructions for Use into another language without the express written consent of JURA Elektroapparate AG.